

3. Allow branches to fall into place or gently pull up and out. When adjusting branches be sure that all wires are free of branches hinges.



4. Shape the branches. Start with tips farthest from the pole, one to the right, one to the left and one at the center of the main stem.



5. After shaping the whole tree following the previous steps, step back and take an overall look at the tree. Shift branches to fill any gaps. Slightly upsweep all branch tips for a uniform look. Your tree is now ready to decorate and enjoy.

6. Now locate the long extension cord and plug it into the wall outlet. Then plug in middle extension cord into the bottom extension cord. Lastly, plug in the light set from the top into the middle. As shown in diagram, and now your tree showed be completed with all lights illuminated.



1. Unplug extension cord from the wall outlet.
2. Unplug each section of extension cord. Keep each stack of light sets connected together.
3. Gently lift off the top and middle sections, and remove the bottom section from the tree stand.
4. Carefully replace the tree in its box and tape it shut, store box in a cool dry place where the temperature does not exceed 100°F

IMPORTANT SAFETY INSTRUCTIONS

Basic precautions should be followed:

HOW TO PROTECT THE PRODUCT

(a) Read and follow all safety instructions, then save these instructions.

(b) Should you discover any of this:

1. Cut, damaged or frayed wire insulation
2. Cracks in the lamp holder or enclosures
3. Loose connections or exposed wires

Then return the producer or contact a service agent.

(c) Before using or reusing inspect product carefully.

(d) When not in use, store neatly in a cool, dry location protected from sunlight.

(e) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.

(f) Do not use this product for other than its intended use as indoor decoration.

WHEN YOU LEAVE

(g) Unplug the product when leaving the house, when retiring for the night, or if left unattended for your safety.

(h) Do not let lamps rest on the supply cord or on any wire.

DON'T LET ME NEAR

(i) This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with except during set-up and take-down.

(j) Do not mount or place near gas or electric heaters, fireplaces, candles or other similar source of heat.

(k) Do not cover the product with cloth, paper or any material not part of the product when in use.

(l) Do not hang ornaments or other objects from cord, wire, or light string. Hang ornaments only on the PVC tree itself.

IF PLUG DOES NOT FIT


(m) The product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. Do not alter or replace the plug.

IF FUSE BLOWS

(n) This product employs an overload protection (fuse). A blown fuse indicated an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be reviewed to determine the cause of this.


REPLACEMENT OF THE LAMP

- (1) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- (2) Pull lamp and plastic base straight out of lampholder.
- (3) Replace lamp with only 2.5 volt bulb-sole have been provided to you.

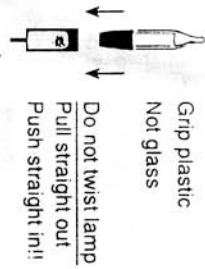

USER SERVICING INSTRUCTIONS FUSE REPLACEMENT

- (1) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- (2) Open fuse cover, slide open fuse access cover on top of attachment plug towards blades.
- (3) Remove fuse carefully, turn fuseholder over remove fuse.
- (4) Risk of fire. Replace fuse only with 3Amp, 125Volt fuse(provided with product - spare included).
- (5) Close fuse cover. Slide closed fuse access cover on top of attachment plug. Do not replace attachment plug. Contains a safety device(fuse) that should not be removed. Discard product if the attachment plug is damaged.

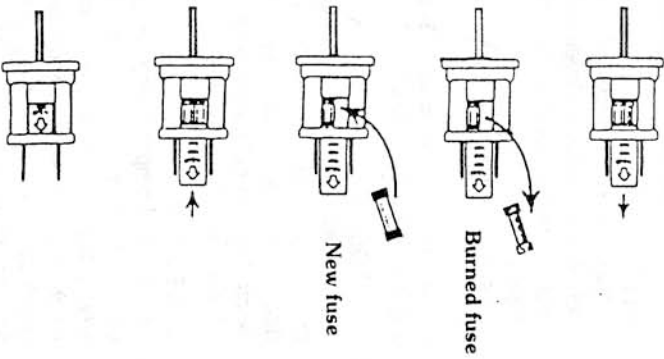

SAFETY INSTRUCTIONS FOR PRE-LIT CHRISTMAS TREE ASSEMBLY

1. Before you start to assemble your tree, choose a location near a wall outlet. Place the tree stand on a level surface.

2. Carefully insert the bottom section of the tree pole into the stand. Make sure pole is firmly inserted into stand and screws tightened. Then insert middle section into bottom and top into middle.

