

Inspiration Fountain Assembly Instructions

1. Place base of fountain on level surface.
2. Put electrical cord from pump through opening in fiberglass tube in base of fountain. Stretch black waterproof rubber cap over and slide down on fiberglass tube. Align cord through notch on the bottom of one side of the base of the fountain (fig. 1) below.
3. Place larger diameter plastic water hose to water output on top of pump. Put "T" connection into hose so that the smaller diameter end is straight up from the pump (fig. 2). Place smaller diameter hose on top of "T" connection. Insert water control valve into top of hose. Turn valve at 45° angle (diagonal).
4. Put pump in bottom of base of fountain within sunken area, and adjust water flow control knob on side of pump to ¼ of maximum. Fill with water but do not get closer than ¾" to the top of the black rubber cap.
5. Set fountain platform in base of fountain, and place pump so that pump and hose are visible through the large hole (fig. 3). Feed water hose from bowl (fig. 4) through smaller hole in platform (fig. 5), connect hose to horizontal output from the "T" connection, and set bowl securely in place. Connect water hose from pillar (fig. 6) to the water control valve and lower pillar into place (fig. 7)
6. Plug electrical cord from pump into outlet. Additional water may be necessary to eliminate air bubbles because bowl has to fill. Add water slowly until air bubbles stop. Be careful to not overfill!
7. Outlet into which cord is plugged must be kept dry.
8. Do not allow pump to run dry.

Note: Do not remove water hose from upper pieces of fountain. It is secured to the pieces during production. Kinks may occur if the hose is too long. Just cut ½" off at a time to reach the correct length of hose needed to allow proper flow of water.

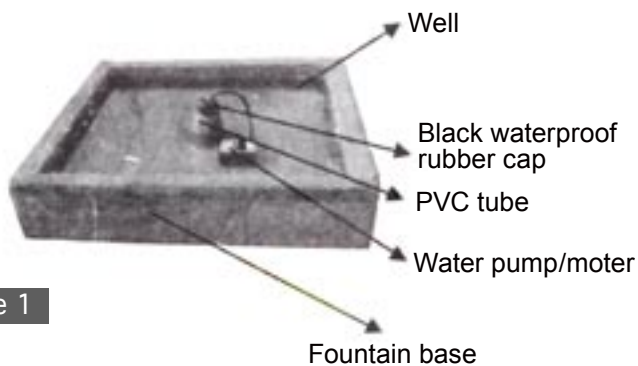


Figure 1



Figure 2



Figure 3

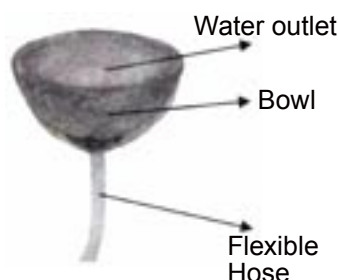


Figure 4



Figure 5

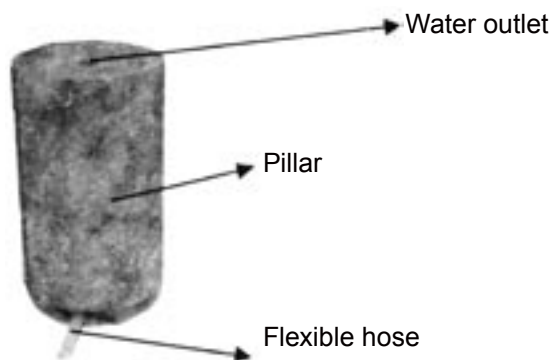


Figure 6

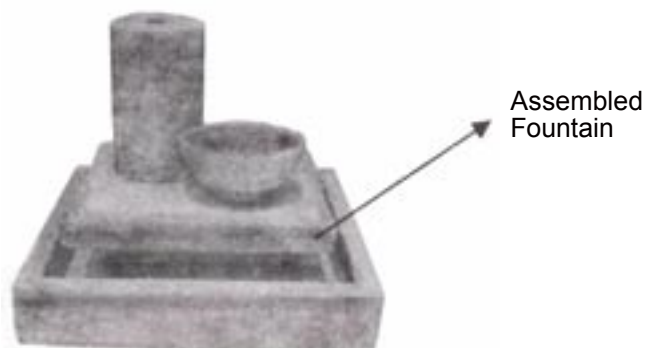


Figure 7