

DB-2640

Simplicity Fountain Assembly Instructions

Assembly of rope lighting and side panels

1. Lay side panels down so that slot for rope lighting is facing up. (Fig. 1)
2. Beginning with end of rope lighting without plug and starting on the far right of the side panels, place end of rope lighting in slot with the cap on the rope lighting right above the first tab (fig. 2). Press rope lighting into remaining length of the slot until it exits the first side panel.
3. Leave at least 9" of rope lighting out before continuing to put onto other side panel (fig. 3). Continue putting rope lighting through other side panel (fig. 4). Rope lighting is longer than slots available. Excess rope lighting will need to rest in bottom of base of fountain.
4. There are 3 slots in the inner rim of the base of the fountain (fig. 5). Assemble side panels so that rope lighting extends from side panels through slots in inner rim of base (fig. 6). Press side panels firmly into place.
5. Put electrical cord for rope lighting through fiberglass tube in base of fountain (fig. 7). Align cord through notch on the bottom of the base of the fountain.



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6

Assembly of pump and pillar

1. Put electrical cord for pump through fiberglass tube in base of fountain (fig. 8). Stretch black rubber cap over and down on top of the tube (fig. 9). (Electrical cord for rope lighting can come out from under black cap or you can cut an opening in the top of the rubber cap and run the cord through the cap.) Align cord through notch on the bottom of one side of the base of the fountain.
2. Put pump in base of fountain, and adjust water flow control knob on side of fountain to $\frac{3}{4}$ of maximum (fig. 10). Fill with water but do not get closer than $\frac{3}{4}$ " to the top of the black rubber cap.
3. While one person holds pillar and slides it down between the side panels, another person will need to attach water hose to the outlet from the pump.
4. There are three (3) slots on the bottom of the pillar (fig. 11). These slots must line up with the slots on the inner rim of the base of the fountain. Position these slots, and lower pillar into place (fig. 12). Firmly press pillar into place.
5. Plug electrical cord from pump into outlet. Additional water may be necessary to eliminate air bubbles or increase water flow. Add water slowly until air bubbles stop. Be careful to not overflow!
6. Outlet into which cords are plugged must be kept dry.
7. Do not allow pump to run dry.



Figure 7

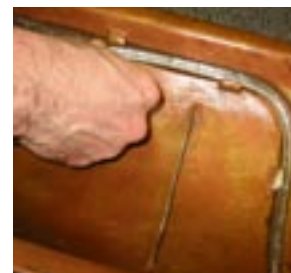


Figure 8



Figure 9



Figure 10



Figure 11



Figure 12

Note: Do not remove water hose from upper piece of fountain. It is secured to the top piece during production. Kinks may occur if the hose is too long. Just cut $\frac{1}{2}$ " off at a time to reach the correct length of hose needed to allow proper flow of water.