

# DB-2645

## Santa Fe Fountain Assembly Instructions

### Assembly of rope lighting and side panels

1. Lay side panels next to each other so that slot for rope lighting faces up. Make sure side exit slots face each other (fig. 1).
2. Starting with end of rope lighting without plug, insert rope lighting in the slot starting right to left. Leave 7" of rope lighting between side panels (fig. 2).
3. Place base of fountain (fig. 3) on level surface. Place side panels into base of fountain. Make sure electrical cord from rope lighting runs through a slot in the inner rim of the base of the fountain (fig. 4).
4. Place separators (fig. 5) in spaces between side panels (fig. 6).
5. Put electrical cord for rope lighting through fiberglass tube in base of fountain (fig. 7). Align with notch in bottom of the side of the base of the fountain.

### Assembly of pump and cone

1. Put electrical cord for pump through fiberglass tube in base of fountain (fig. 8). Stretch black rubber cap over and down on top of the tube (fig. 9). (Electrical cord for rope lighting can come out from under black cap or you can cut an opening in the top of the rubber cap and run the cord through the cap.) Align cord through notch on the bottom of one side of the base of the fountain.
2. Put pump in base of fountain, and adjust water flow control knob on side of fountain to  $\frac{3}{4}$  of maximum (fig. 10). Fill with water but do not get closer than  $\frac{3}{4}$ " to the top of the black rubber cap
3. Remove side panel without electrical cord and set aside (fig. 11). One person needs to hold the cone (fig. 12) while another person attaches water hose to output on top of pump (fig. 13). Lower pump and cone into place into center of base of fountain (fig. 14).
4. Replace side panel which was removed (fig. 15), and reposition rope lighting into slot.
5. Plug electrical cord from pump into outlet. Additional water may be necessary to eliminate air bubbles or increase water flow. Add water slowly until air bubbles stop. Be careful to not overfill!
6. Outlet into which cords are plugged must be kept dry.
7. Do not allow pump to run dry.

**Note:** Do not remove water hose from upper piece of fountain. It is secured to the top piece during production. Kinks may occur if the hose is too long. Just cut  $\frac{1}{2}$ " off at a time to reach the correct length of hose needed to allow proper flow of water.



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6



Figure 7



Figure 8



Figure 9



Figure 10



Figure 11

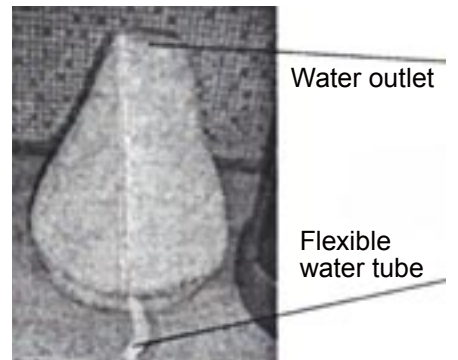


Figure 12



Figure 13



Figure 14



Figure 15