

DB-2675

Sphinx Fountain Assembly Instructions

1. Place base of fountain on level surface.
2. Put electrical cord from pump through opening in fiberglass tube in base of fountain. Stretch black rubber cap over and slide down on fiberglass tube (fig. 1). Align cord through notch on the bottom of one side of the base of the fountain.
3. Put pump in base of fountain, and adjust water flow control knob on side of pump to $\frac{3}{4}$ of maximum. Fill with water but do not get closer than $\frac{3}{4}$ " to the top of the black rubber cap.
4. Place platform of fountain (fig. 2) on base, making sure flange on bottom of platform is entirely inside the base.
5. Pull pump through opening in platform (fig. 3), and attach plastic water hose from upper piece of fountain (fig. 4) to water output on top of pump (fig. 5). Lower pump through opening in platform (fig. 6) and place upper piece into position over opening in platform (fig. 7).
6. Plug electrical cord from pump into outlet. Additional water may be necessary to eliminate air bubbles or increase water flow. Add water slowly until air bubbles stop. Be careful to not overfill!
7. Outlet into which cord is plugged must be kept dry.
8. Do not allow pump to run dry.

Note: Do not remove water hose from upper piece of fountain. It is secured to the top piece during production. Kinks may occur if the hose is too long. Just cut $\frac{1}{2}$ " off at a time to reach the correct length of hose needed to allow proper flow of water.



Figure 1



Figure 2



Figure 3

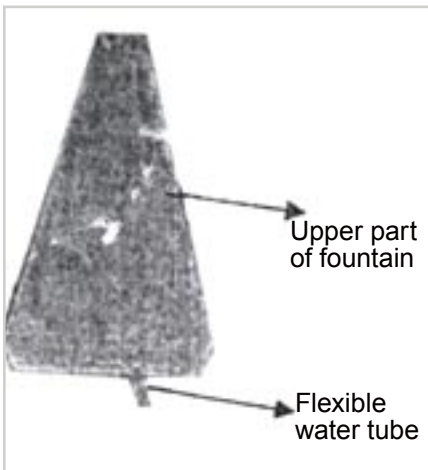


Figure 4



Figure 5



Figure 6



Figure 7